

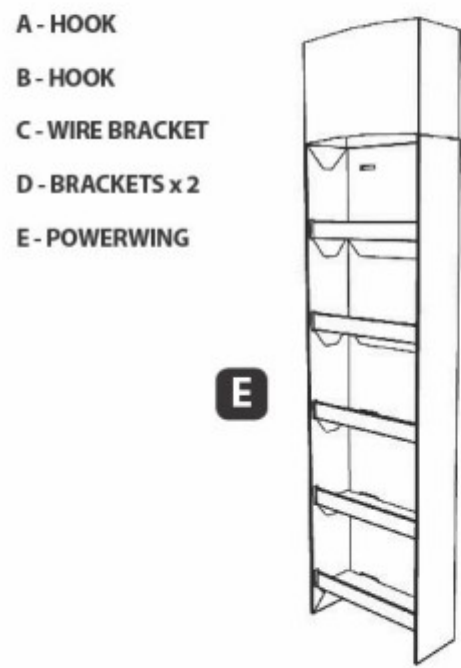



# POWERWING - ASSEMBLY INSTRUCTIONS

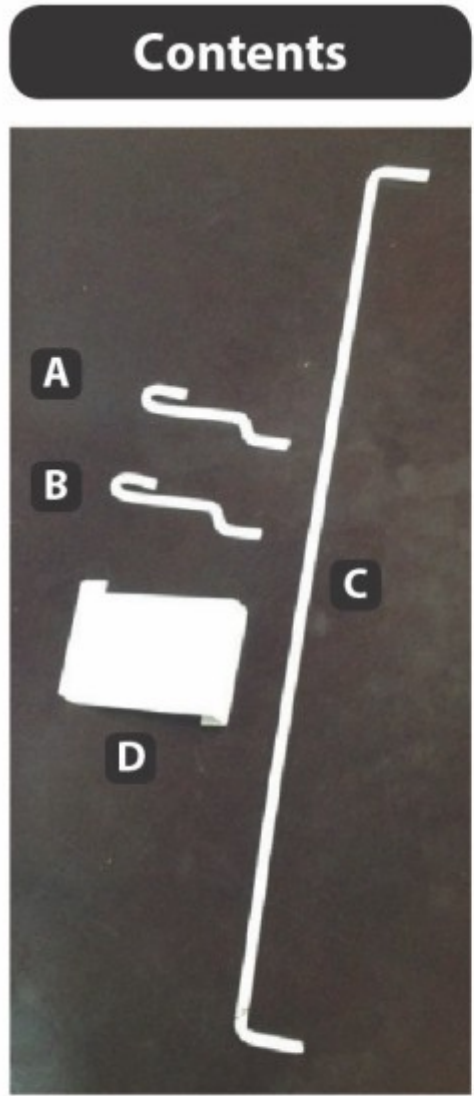



NB: Before assembly, pre-crease, fold all elements across crease lines & remove all excess material.  
**NEVER ATTEMPT TO MOVE A STOCKED UNIT.**

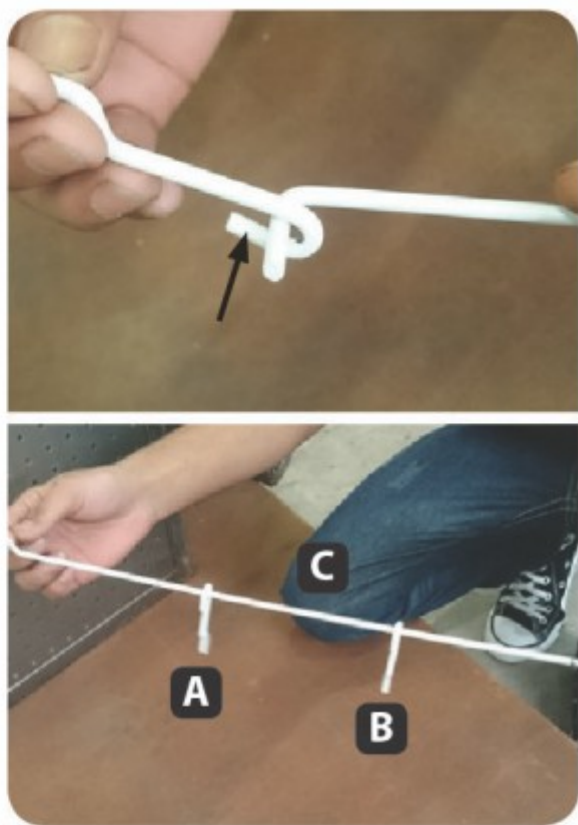



**1** Attach **HOOKS A and B** onto **WIRE BRACKET C**, ensuring that the hooks face in the same direction.

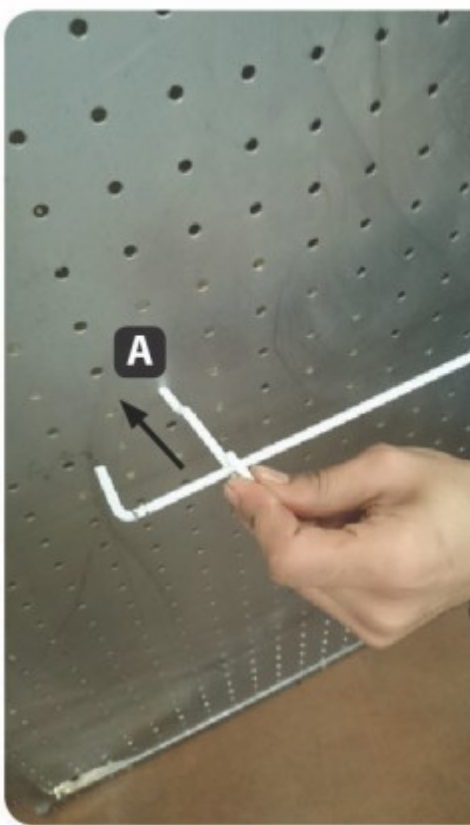



**2** Insert **HOOK A and B** into holes in the wall bracket, ensuring bend angles downwards **CORE UNIT** up with base at bottom.

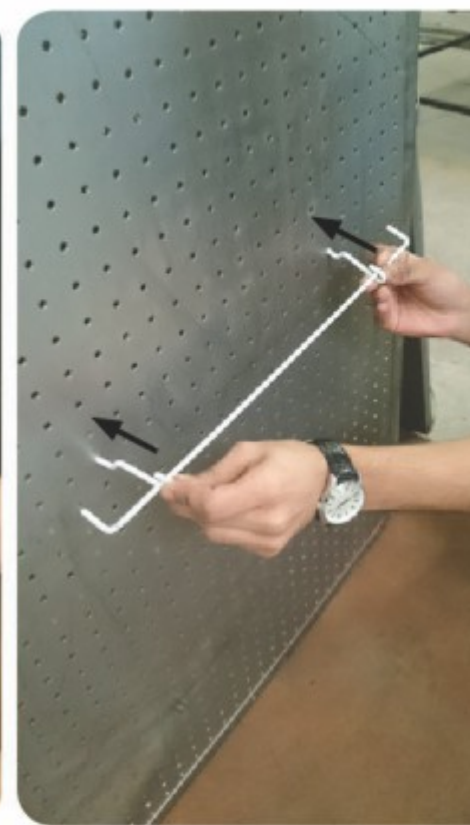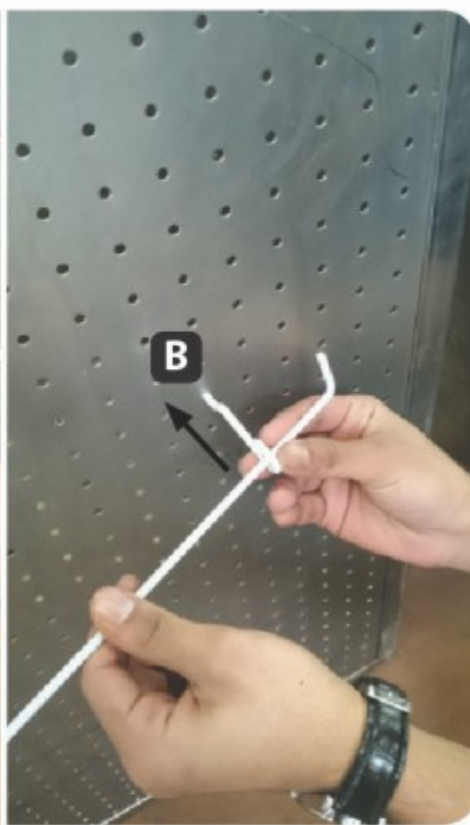

**3** Ensure that both **HOOK A and B** are inserted up to the bend and let go. The **BRACKET** should hold in position.

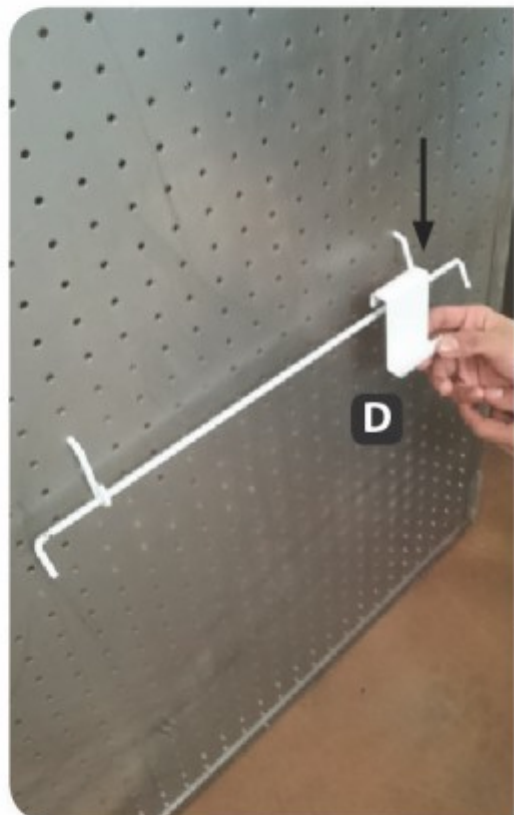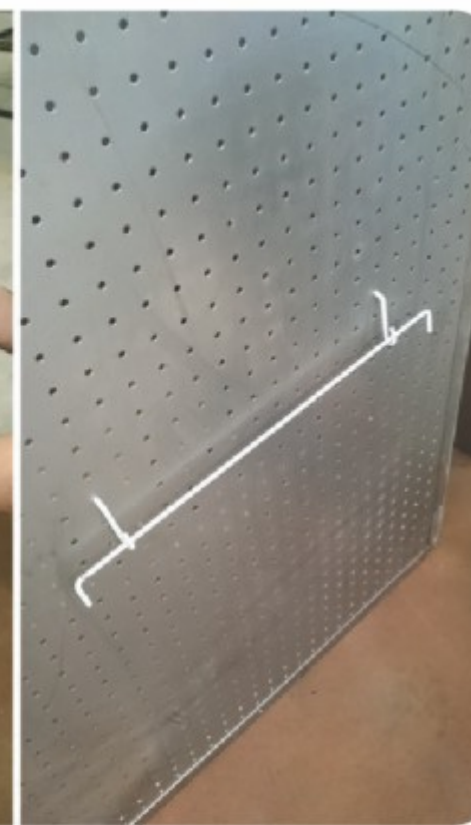

**4** Hook 2 x **BRACKET D** on to **WIRE BRACKET C** as shown.

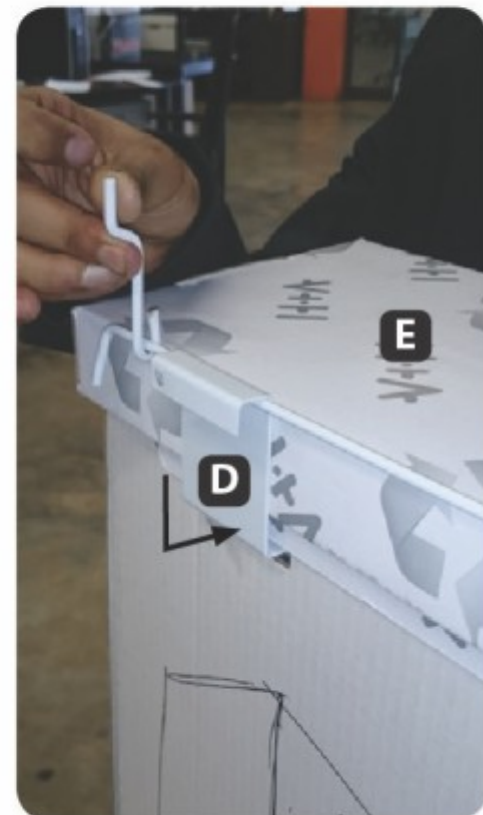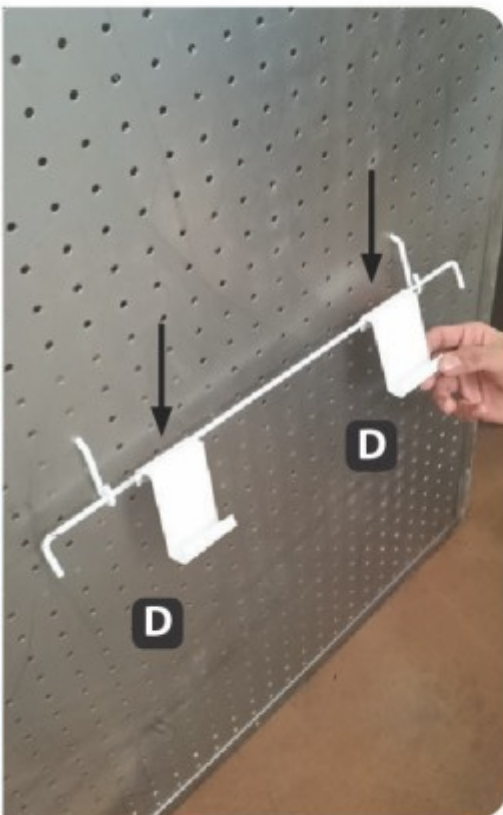

**5** Line up both of the **BRACKET D's** with the slots in the back of the **POWERWING E**. Insert to attached as shown.



**6** The **POWERWING** is now attached to the GE.