

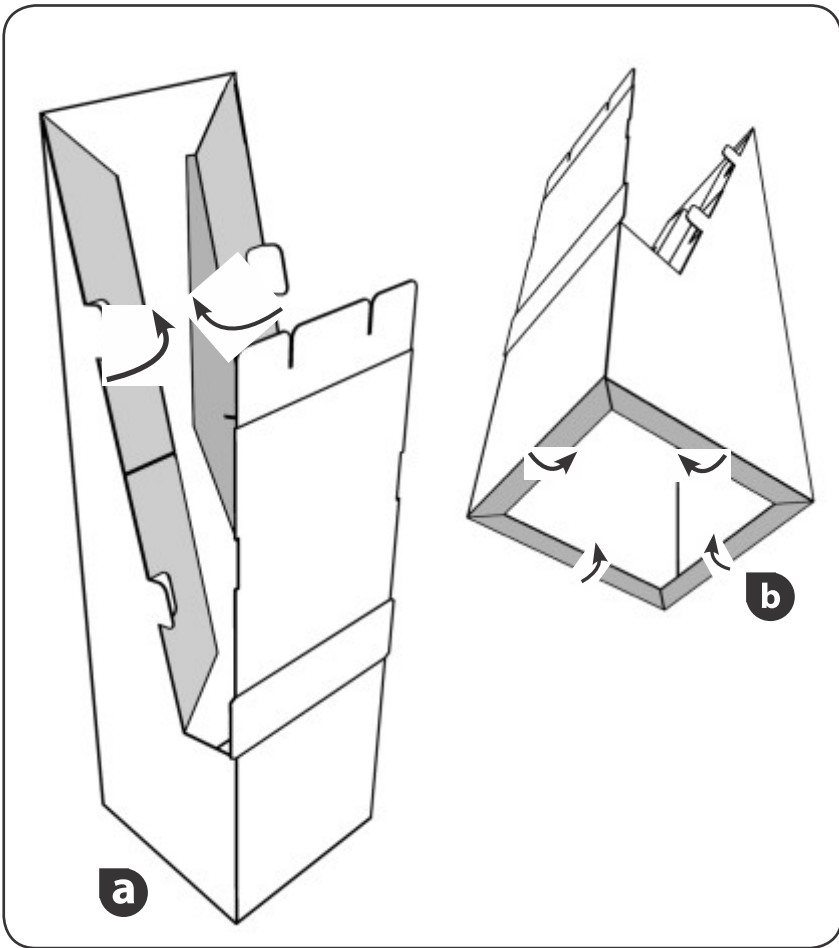

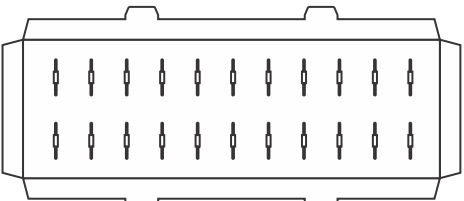
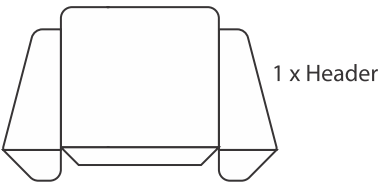


FSU PEGGED - ASSEMBLY INSTRUCTIONS


Contents

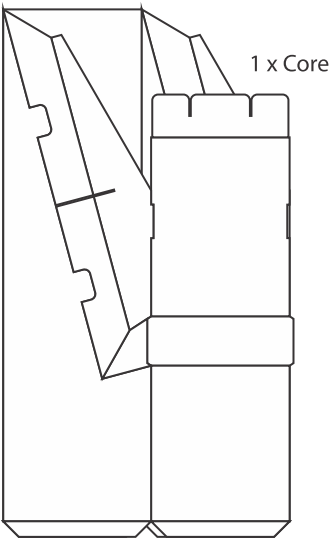


- 1** a) Expand core unit and fold the side flaps inwards.
b) Fold the tabs at the base of the core.

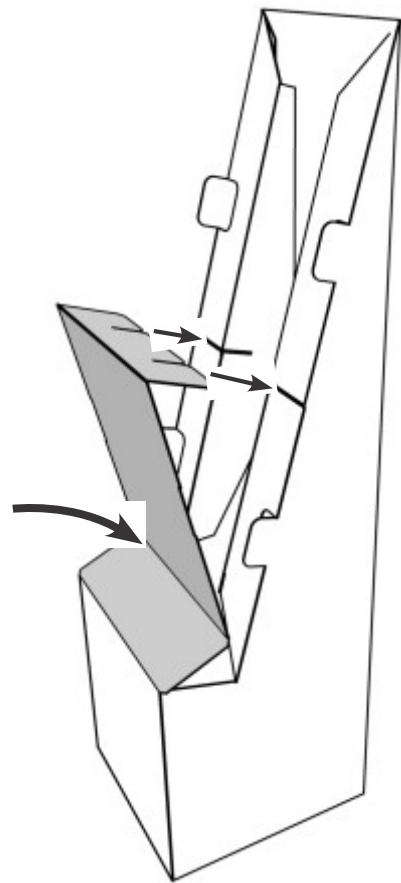


- 2** Fold over the front flap ensuring the top tab locates into the slots on the core side flaps as shown.

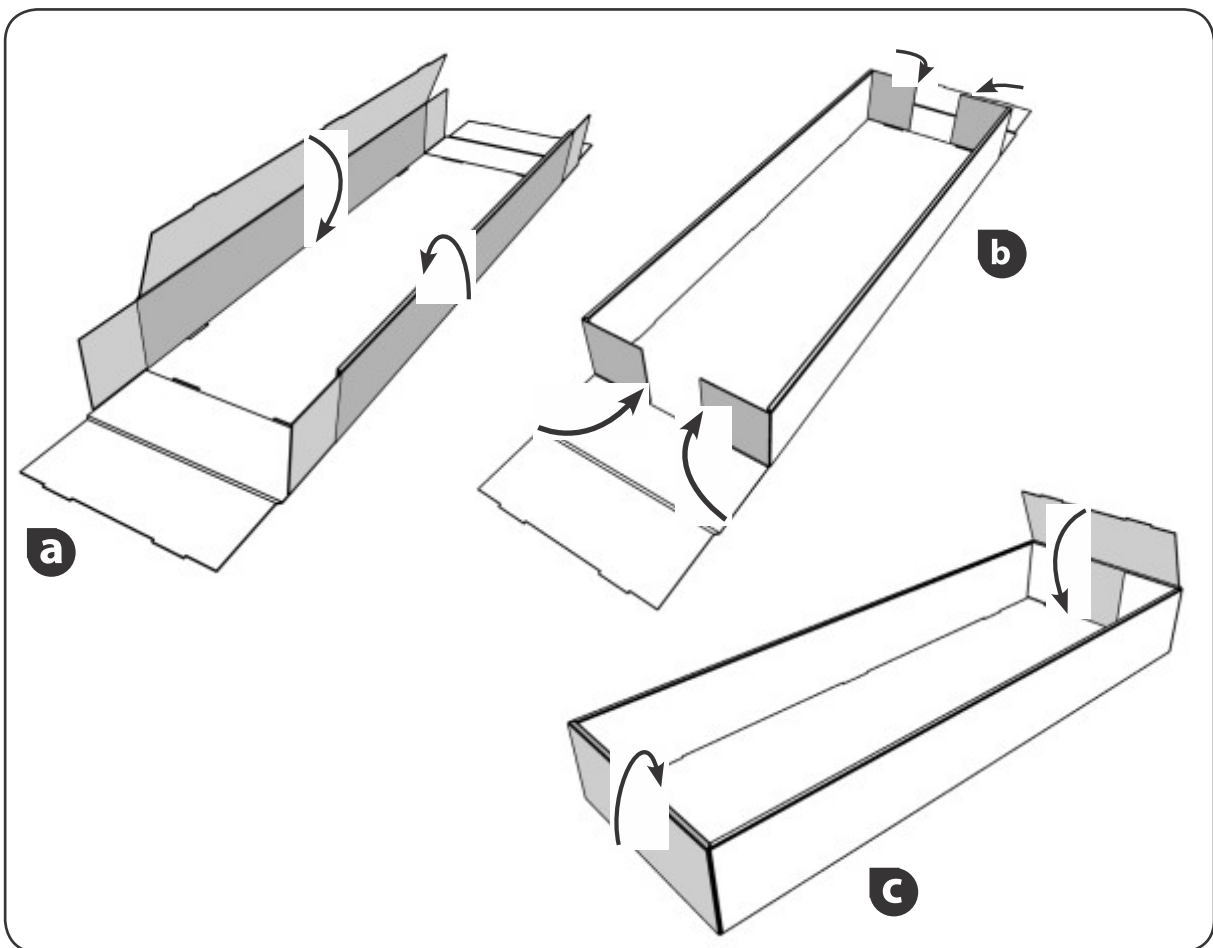


- 3** Make up the cassette panel by following steps a) - c).

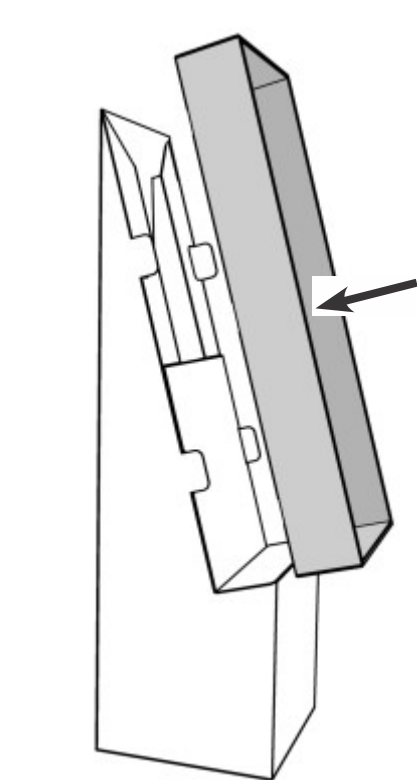


- 4** Attach the cassette to the core by allowing the tabs on the core to pass through the slots on the sides of the cassette.

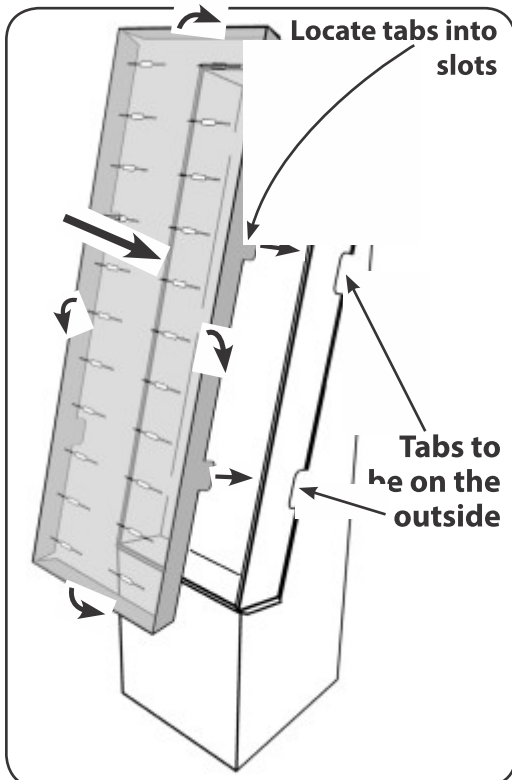

- 5** Fold end flaps of the pegboard then insert into the cassette.

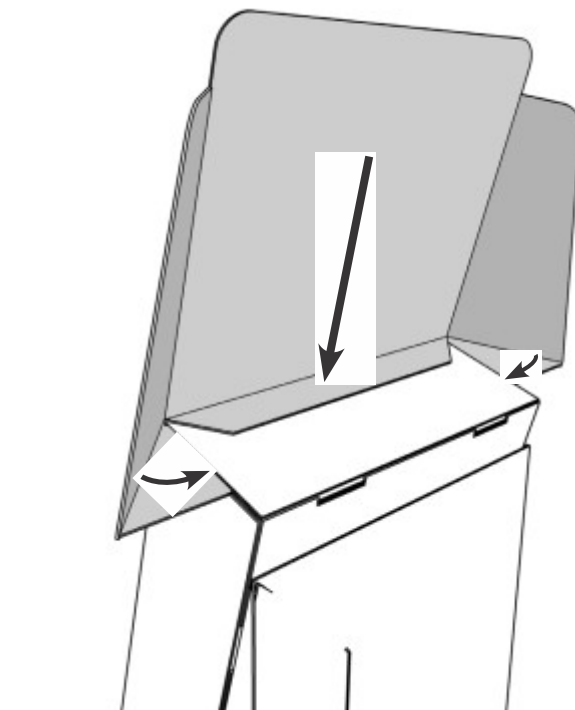

- 6** Attach the header to the unit by inserting the header onto the top slots of the cassette.

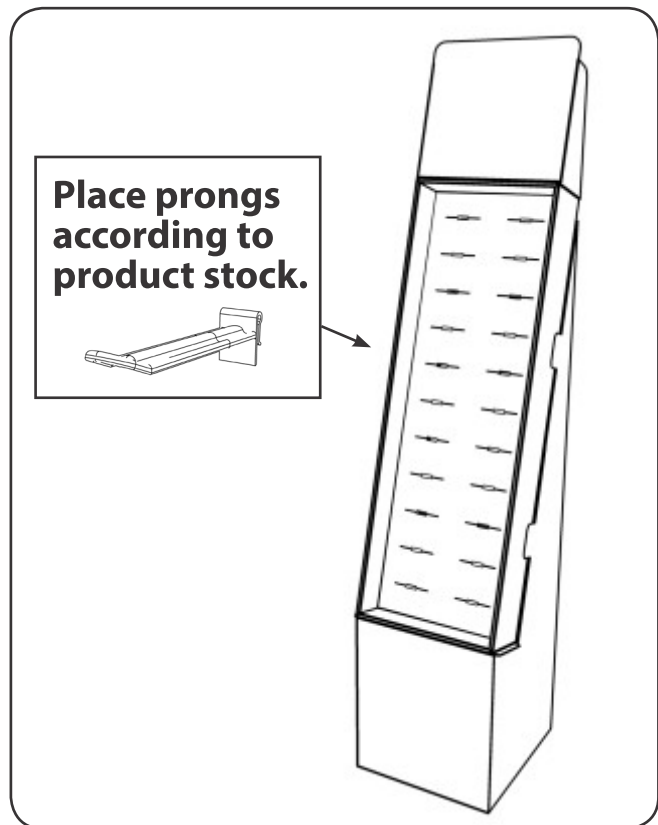

- 7** The unit is now complete.