



SPT003 CD COUNTER 6 CELL - ASSEMBLY INSTRUCTIONS


Contents

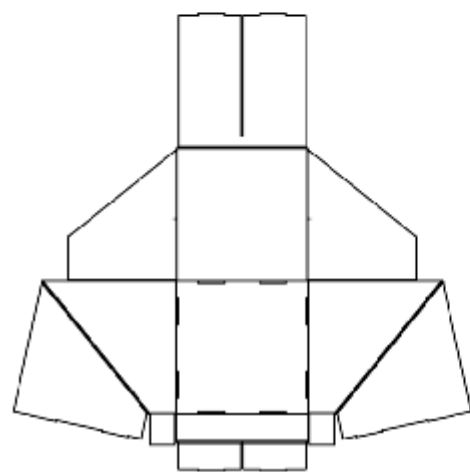


1 x Counter Top Unit

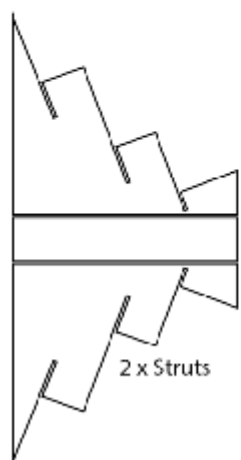


2 x Struts

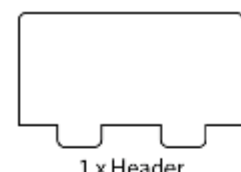


1 x Header

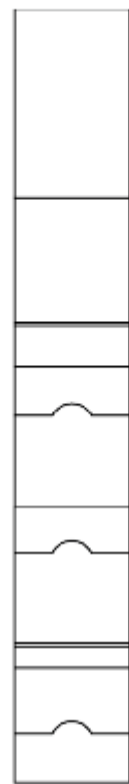


2 x Inner Strut Pads

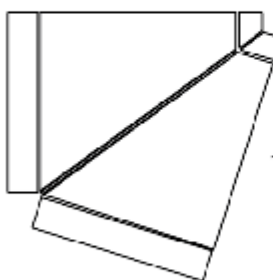


1 x Divider

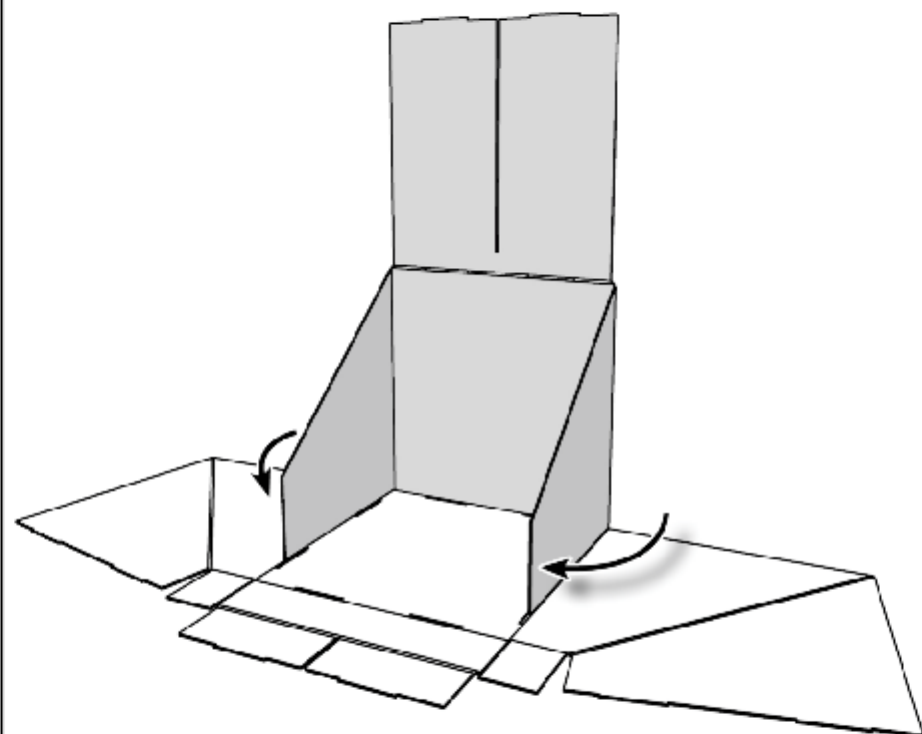


1 Expand Counter Top unit and fold back side flaps.

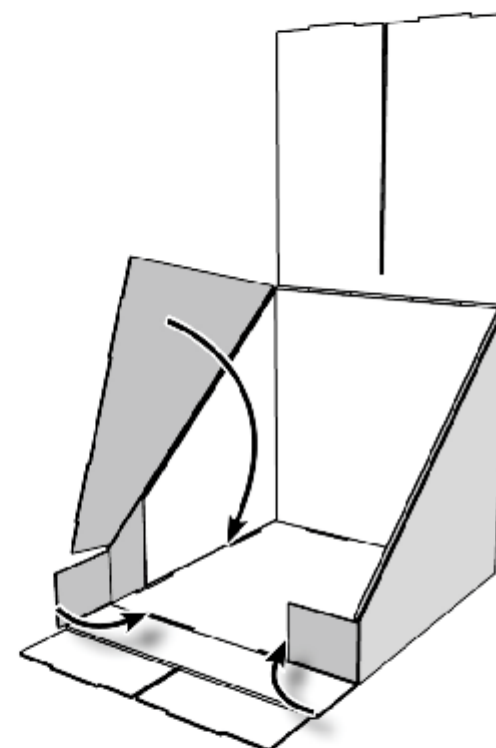


2 Fold the side flaps over ensuring the tabs slot into the slots on the inner sides. Fold the small front flaps inwards.

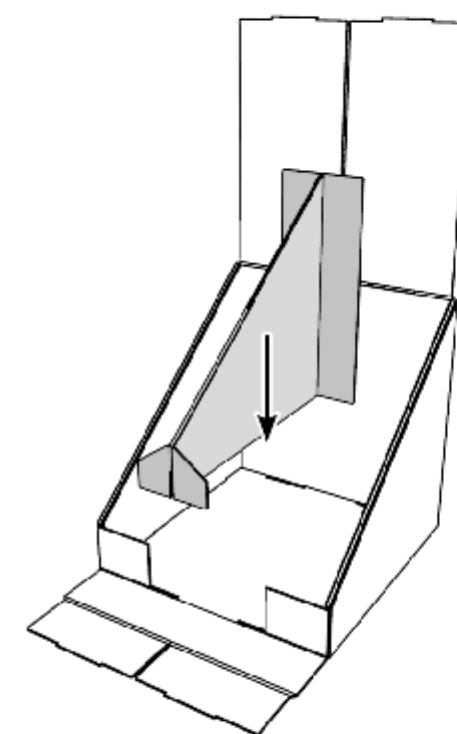


3 Make up divider and insert into unit as shown.

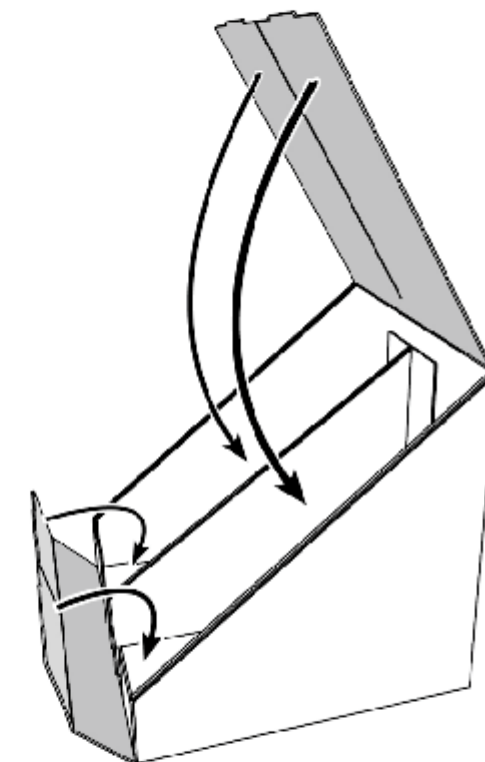


4 Fold over the back panel followed by the front panel.

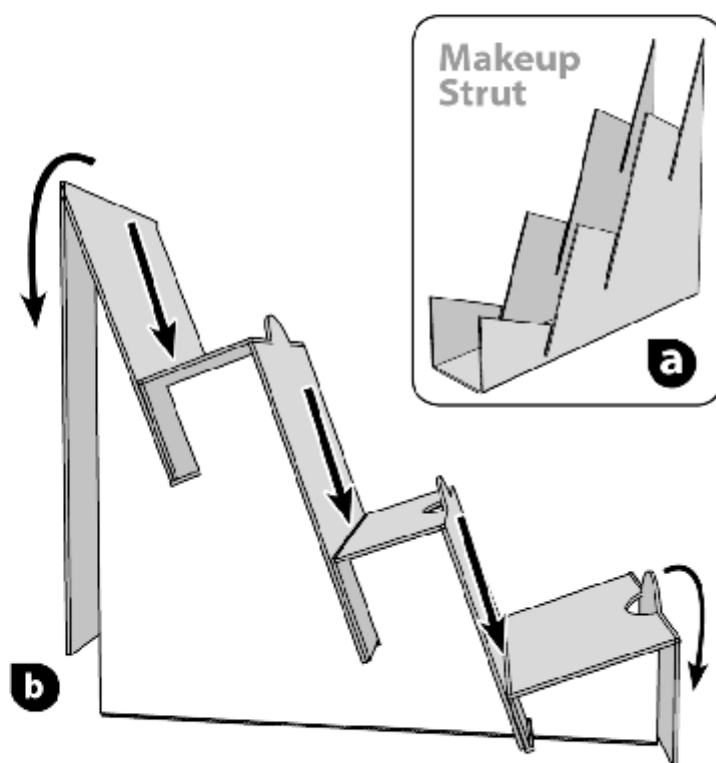


5 a) Make up base strut.
b) Fold and insert strut pad into the strut.

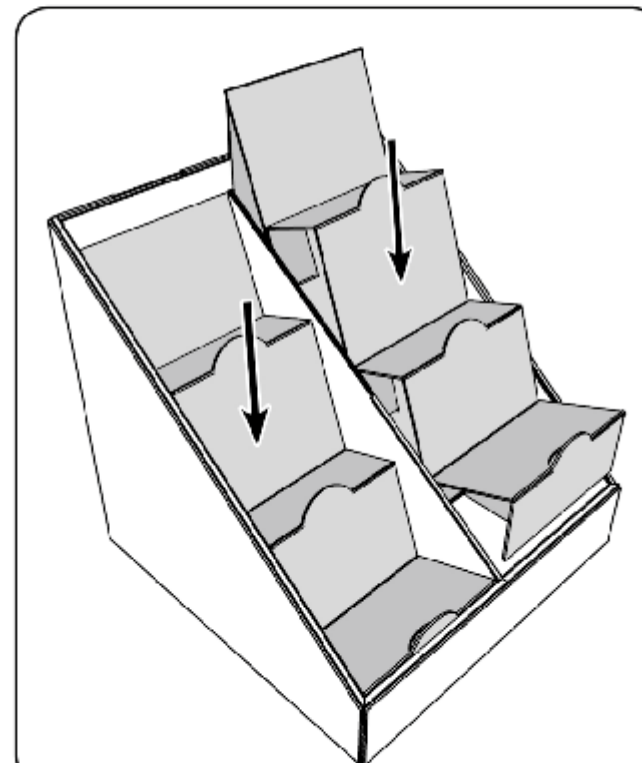

6 Insert the made-up struts into the unit on either side of the divider.

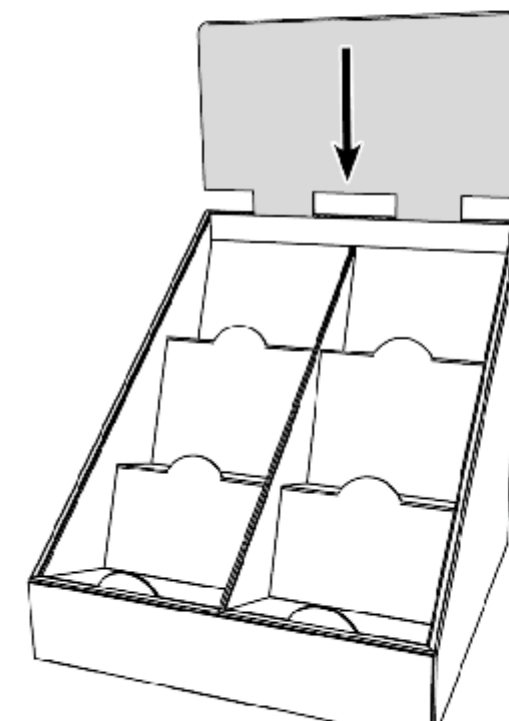

7 Attach the header to the unit by inserting the header onto the back slots of the unit.

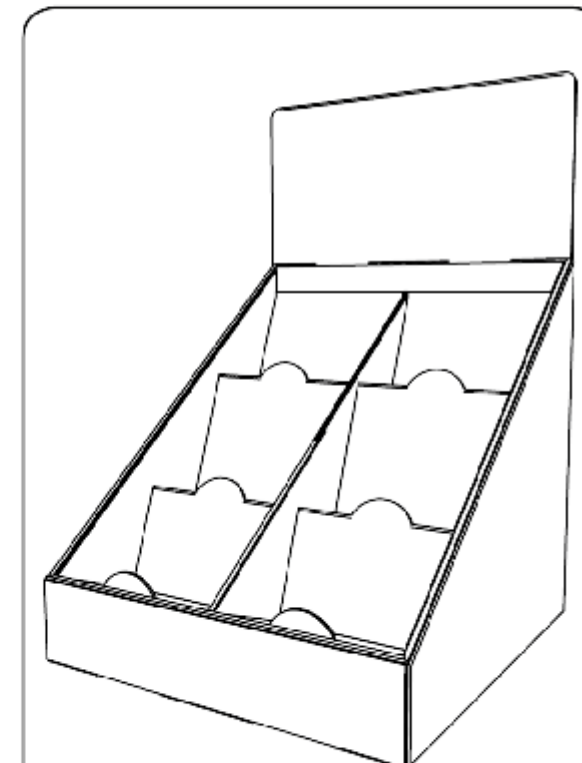

8 The unit is now complete.